




SECUNORM HANDY

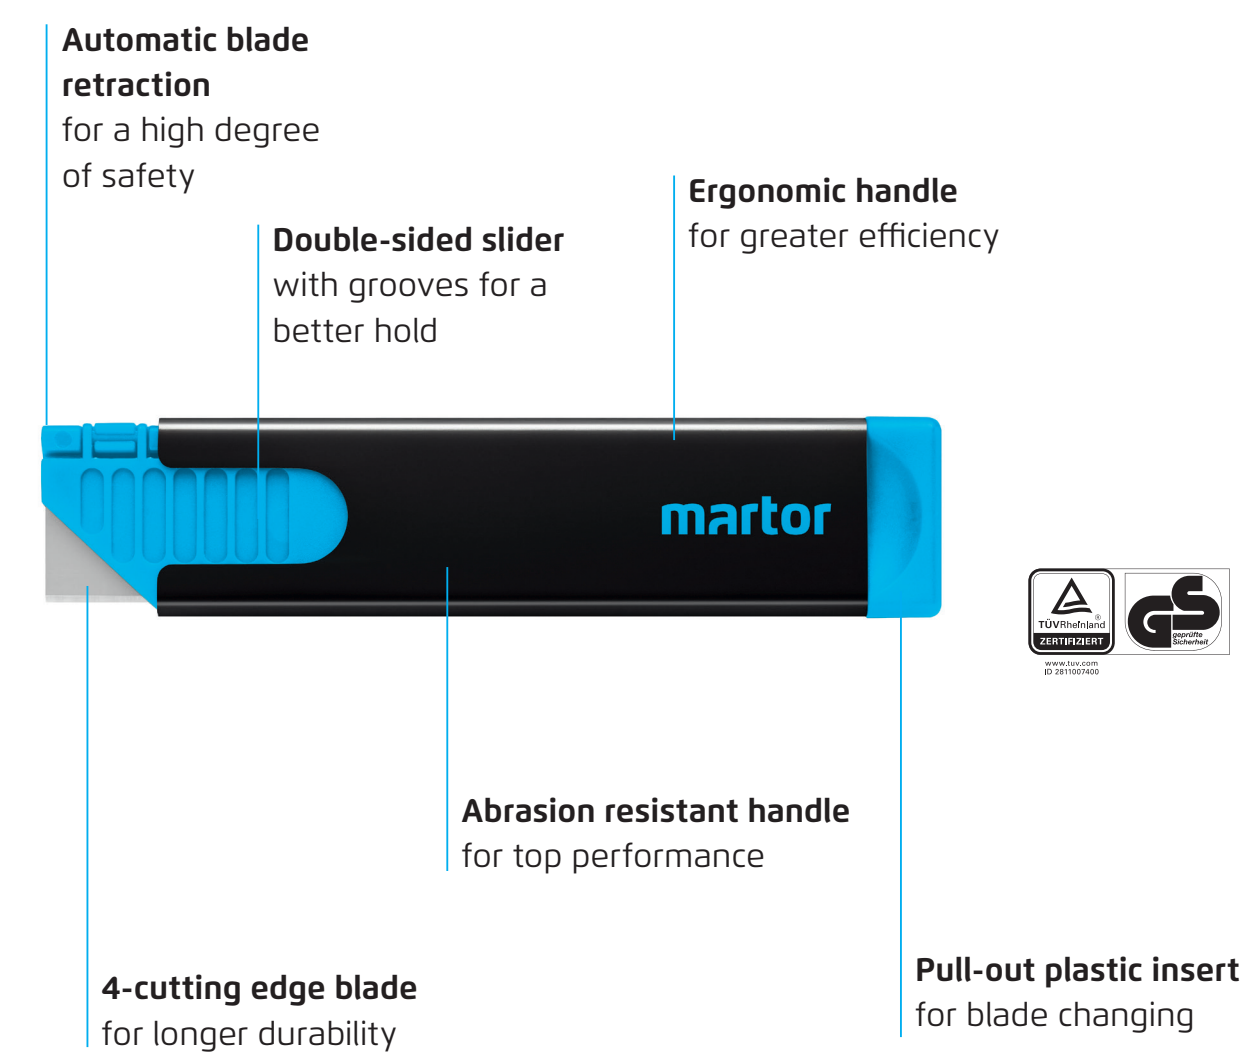

USAGE

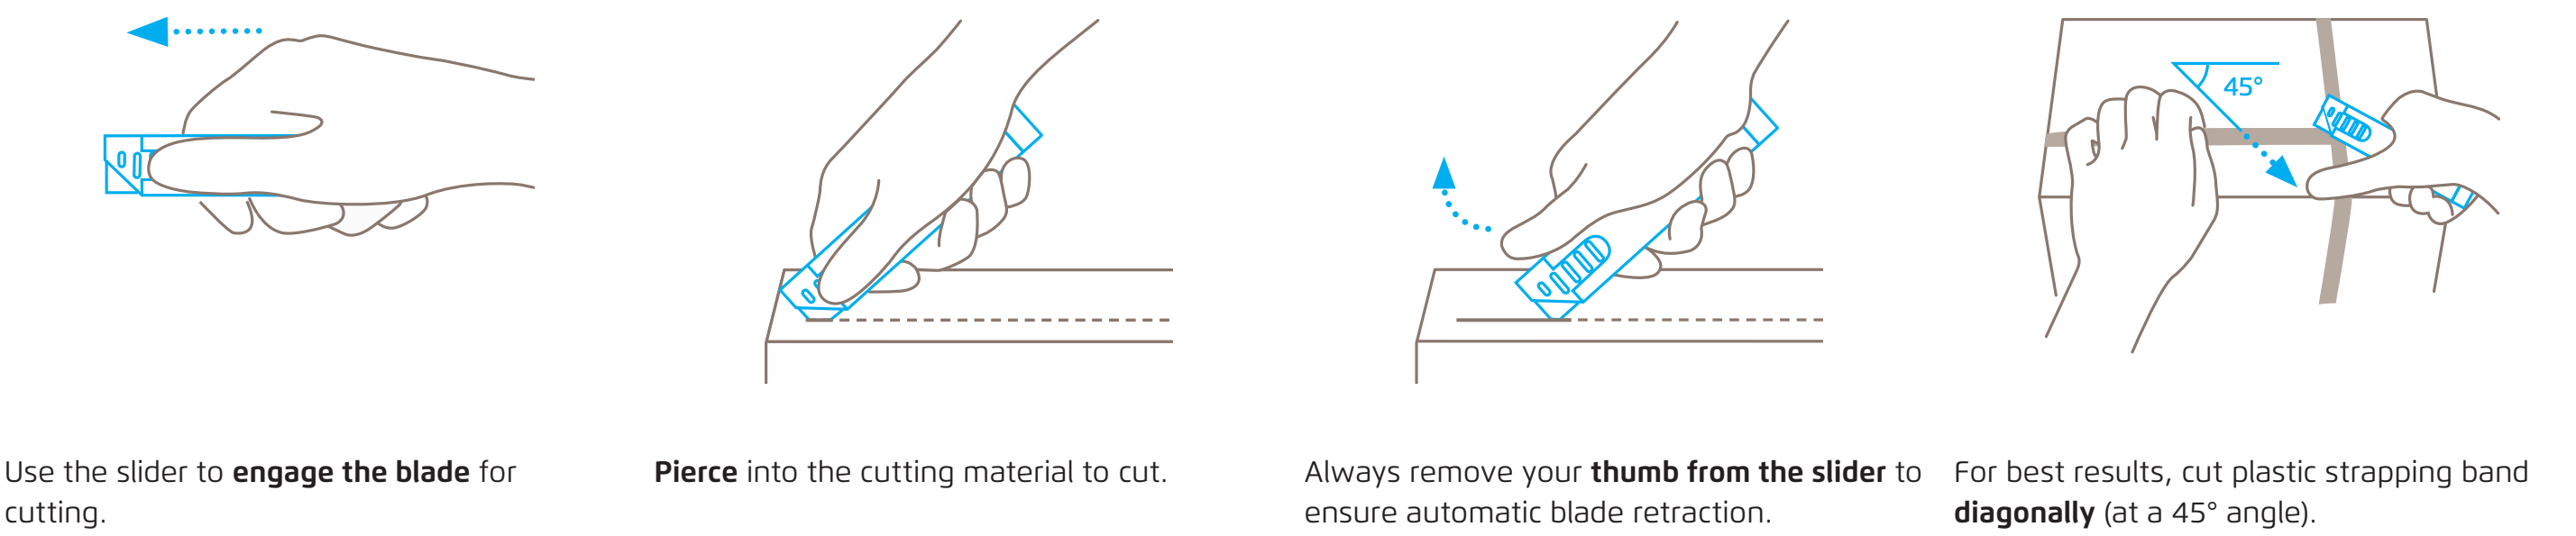


BLADE CHANGE

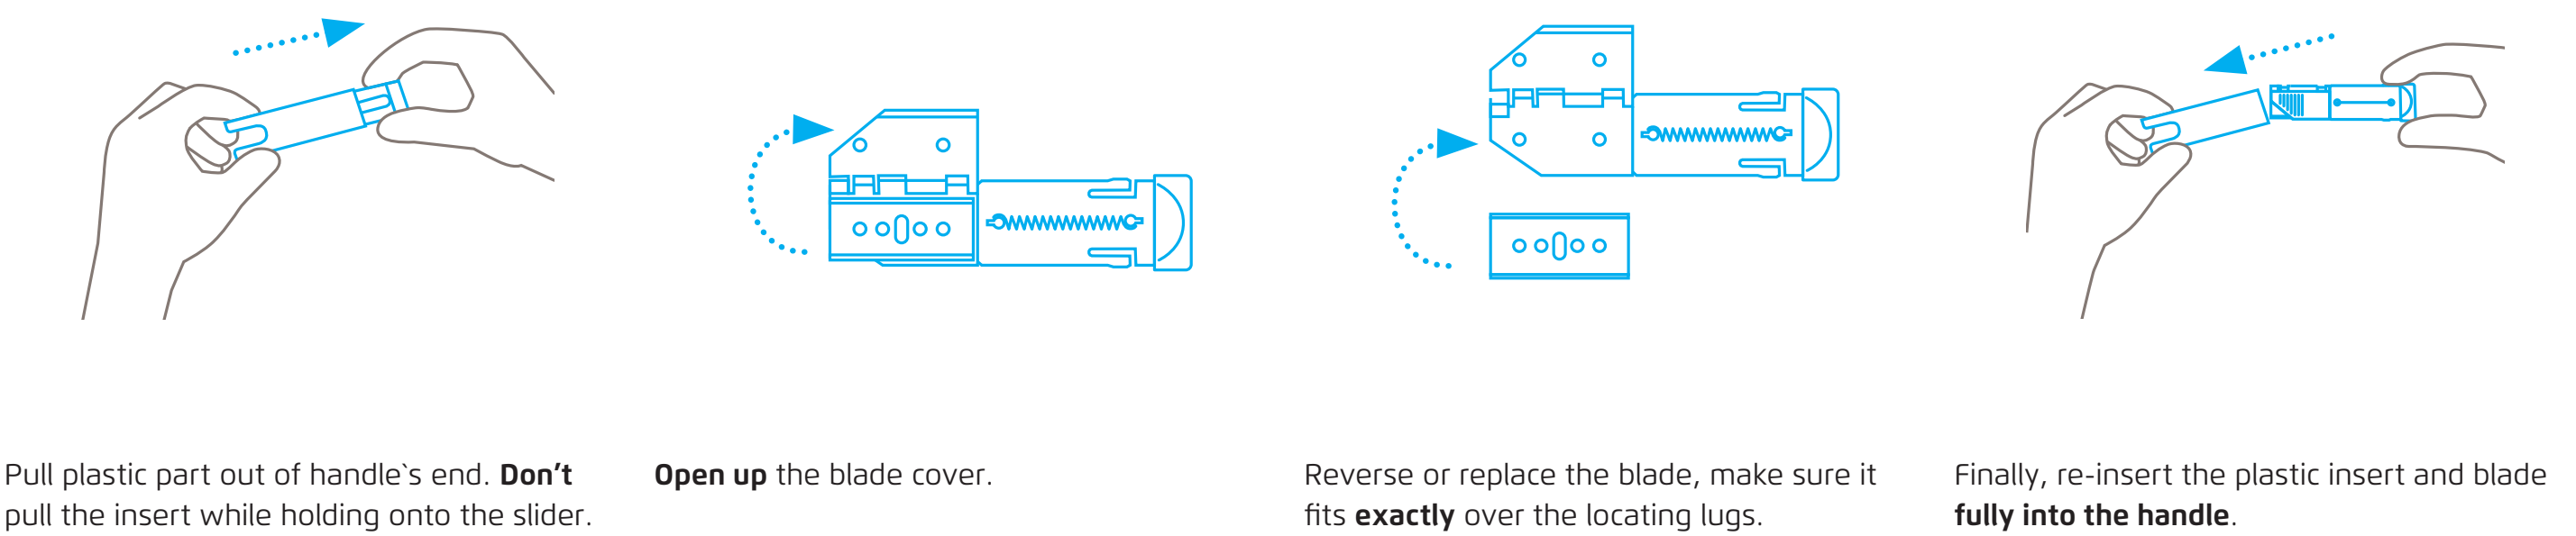


Please note: To ensure your product always functions flawlessly, regularly remove any impurities. For additional safety, we recommend wearing gloves.

PROTECTION OF USER

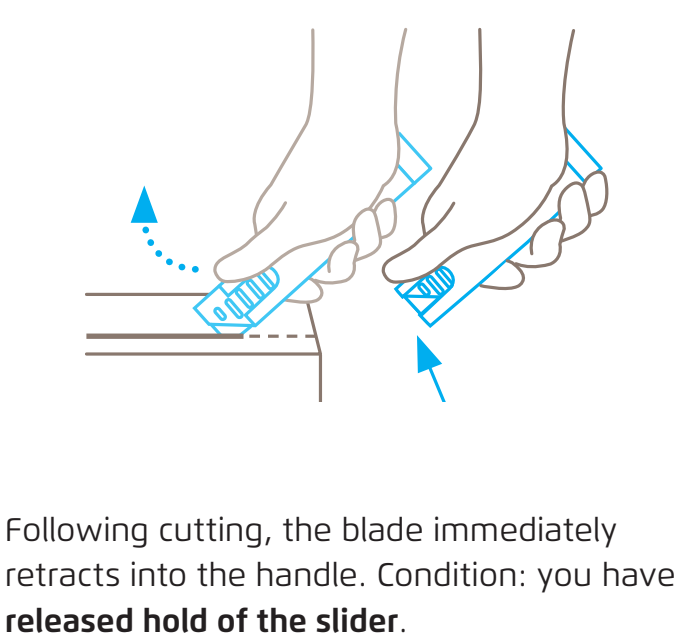

PROTECTION OF GOODS

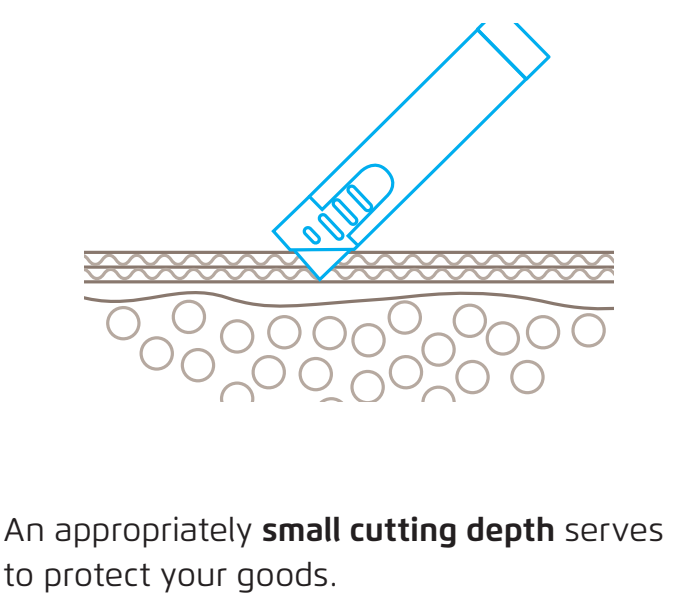

DISPOSAL

